

# APAX evo

## User manual

Version: 1.0

Date: August 2020



## **WARNING: Read this user manual before first flight!**

**Like any extreme sport, powered paragliding involves unpredictable risks which may lead to injury or death. By choosing to fly, you assume the sole responsibility for those risks.**

**Because it is impossible to anticipate every situation or condition that can occur while powered paragliding, this manual makes no representation about the safe use of the wing under all conditions. Neither Fresh Breeze nor the seller of Fresh Breeze equipment can guarantee, or be held responsible for, the safety of yourself or anyone else.**

**Many countries have specific regulations or laws regarding powered paragliding activity. It's your responsibility to know and observe the regulations of the region where you fly.**

Fresh Breeze reserves the right to alter or add to the contents of this manual at any time. You should therefore regularly visit our website:

**[www.fresh-breeze.de](http://www.fresh-breeze.de)**

where you will find additional information relating to your paraglider and any changes to the manual. The date and version number of this manual are given on the front page.

## Thank you...

... for choosing Fresh Breeze. This user manual contains important information for the use and maintenance of your paraglider. Detailed knowledge of your glider and equipment will help you to fly safely and make the most of your flights.

Your Fresh Breeze paraglider has been designed to meet all safety and regulatory requirements. These requirements also include the need to familiarise yourself with this user manual and the information and instructions regarding safety, equipment and service prior to the initial commissioning. These operating instructions must be fully read and understood before the first flight.

If you have any further questions about these operating instructions, please contact your Fresh Breeze dealer in the first instance, or Fresh Breeze directly.

We wish you exciting flights and always a safe landing.  
Your Fresh Breeze team

# Contents

<b>Fresh Breeze</b>	<b>7</b>
Manual	7
Fresh Breeze website	7
Fresh Breeze and the environment	8
Respect for nature and the environment	8
Environmentally-friendly recycling	8
<b>Safety</b>	<b>9</b>
Safety advice	9
Safety notices	9
Liability, warranty exclusion and operating limitations	9
Liability and warranty exclusion	10
Operating limitations	10
Glider categories and guidelines	10
DGAC certification	11
EN/LTF certification	11
Description of flight characteristics	11
Target group and recommended flying experience	11
Description of pilot skills required	11
Suitability for training	11
Before the first flight	12
Harness	12
Reserve	13
Weight range	13
Overload	13
First flight	13
<b>Flying the APAX evo</b>	<b>14</b>
Preparation for launch	14
Material check	14
Pre-flight check	14
Start check	15
General warnings and advice	15
Launching	16
Forward launch	16
Additional information for starting with engine	16
Reverse launch	16
Additional information for reverse launch with engine	17
Tips for paragliding take-off	17
Knots or loops in the lines	17
The initial climb-out	17
Engine-induced oscillations	18

In-flight characteristics	18
Cruising flight	18
Normal flight	18
Accelerated flight	19
Turning	19
Active flying	19
Rapid descent techniques	20
Spiral dives	20
B-Stall	21
Big ears	22
Landing	22
Additional information for landing with motor	23
Landing with standing propeller	23
Landing with trailing throttle	24
Additional information for motorized flying	24
Range of use	24
Towing	24
Attaching the towline release system	25
Tandem paragliding	26
Aerobatics	26
<b>Dangerous situations and extreme flying</b>	<b>27</b>
Dangerous situations	27
SIV / Safety training	27
Material stress	27
Canopy Collapses	28
Asymmetric collapses	28
Cravat / glider wrapped around lines	28
Symmetric collapses (Front stall)	29
Types of stall	29
Deep stall (parachuting, stable stall)	30
Full stall (dynamic stall)	30
Spin	31
Other tips for dangerous situations	31
Cascade	31
Emergency steering (rear riser steering)	31
Flying in the rain	31
Advertising and adhesives	32
Overloading	32
Sand and salt air	32
Temperature range	32
<b>Storing, care, maintenance and repairs</b>	<b>33</b>
Storing the paraglider	33
Packing the paraglider	33
Rucksack	34
Storing and transporting the glider	34

Care	35
Ground handling	35
Fabric	35
Lines	36
Rigid construction	36
Cleaning	36
Maintenance	37
Type designation	37
Regular inspections	37
Lines	37
Inspection periods	38
Validity of inspection	38
Inspection by the pilot	38
Repairs	39
Fresh Breeze workshops	39
Small repairs to the glider	39
Fresh Breeze quality and service	39
<b>Dimensions, illustrations, technical and EN/LTF data</b>	<b>40</b>
Introducing the APAX evo	40
Delivery	40
Manufacturing	40
Overall illustration	41
Technical data	41
Riser and speed system	42
Riser	42
Riser diagram	42
Riser lengths	43
Trimmer	43
Speed System	43
Hangpoints	44
Line system, brakes and line plan	44
Line system	44
Brake line adjustment	45
Factory setting	45
Incorrect adjustment	45
Variable brake pulleys	46
Upper brake pulley	46
Line layout	47
Materials	48
<b>Appendix</b>	<b>49</b>
Glider details	49
Pilot details / Proof of ownership	49
Inspections and repairs overview	50
Notes	50
Adressses	51

# Fresh Breeze

## Manual

We recommend that you familiarise yourself with your new paraglider by reading this manual before your first flight. This will allow you to acquaint yourself its new functions, to learn the best way to fly the paraglider in various situations, and explain how to get the best out of your paraglider.

Information in this manual on design of the paraglider, technical data and illustrations are subject to change. We reserve the right to make changes without prior notification.

The manual complies with the EN 926-2 and DGAC airworthiness and forms part of the certification. It is comprised of:

1. Manual (this document):  
Instructions on getting started and using the paraglider
2. Inspection Information:  
General instructions and guidance on carrying out the regular inspection of paragliders
3. Glider details:  
Pilot details , proof of ownership and inspections and repairs overview

This manual was current at the time of publication, and may also be downloaded from the Fresh Breeze website.

## Fresh Breeze website

Fresh Breeze has a comprehensive website, which provides additional information about the APAX evo, any updates to the manual and many other issues related to paragliding.

**[www.fresh-breeze.de](http://www.fresh-breeze.de)**

On the Fresh Breeze website, you will find an extensive range of accessories for your paraglider and other useful products.

You will also find links there to other services and websites:

- Fresh Breeze Shops
- Facebook, Instagram & youtube

These websites and their content are provided for your use. The content of Fresh Breeze websites has been made available for your use on an “as is” and “as available” basis. Fresh Breeze reserves the right to alter the websites at any time or to block access to them.

## Fresh Breeze and the environment

Protection of the environment, safety and quality are the three basic values of Fresh Breeze and these have implications on everything we do. We also believe that our customers share our environmental awareness.

### **Respect for nature and the environment**

You can easily play a part in protection of the environment by practising our sport in such a way that there is no damage to nature and the areas in which we fly. Keep to marked trails, take your rubbish away with you, refrain from making unnecessary noise and respect the sensitive biological equilibrium of nature. Consideration for nature is required even at the launch site!

Paragliding is, of course, an outdoor sport – protect and preserve our planet's resources.

### **Environmentally-friendly recycling**

Fresh Breeze gives consideration to the entire lifecycle of its paragliders, the last stage of which is recycling in an environmentally-friendly manner. The synthetic materials used in a paraglider must be disposed of properly. If you are not able to arrange appropriate disposal, Fresh Breeze will be happy to recycle the paraglider for you. Send the glider with a short note to this effect to the address given in the appendix.



# Safety

**WARNING: the safety advice and instructions contained in this manual must be followed in all circumstances. Failure to do so may invalidate the certification and/or result in loss of insurance cover, and could lead to serious injuries or even death.**

## Safety advice

Paragliding demand a high level of individual responsibility. Prudence and risk-awareness are basic requirements for the safe practice of the sport, for the very reason that it is so easy to learn and practically anyone can do so. Carelessness and overestimating one's own abilities can quickly lead to critical situations. A reliable assessment of conditions for flying is particularly important. Paragliders are not designed to be flown in turbulent weather. Most serious accidents with paragliders are caused by pilots misjudging the weather for flying.

In Germany, paragliders are subject to the guidelines for air sports equipment and must not under any circumstances be flown without a valid certification. Independent experimentation is strictly prohibited. This Manual does not replace the need to attend training at a paragliding school.

The manual must be passed on to any new owner if the paraglider is sold. It is part of the certification and belongs with the paraglider.

Observe the other specific safety advice in the various sections of this manual.

## Safety notices

Safety notices are issued when defects arise during use of a paraglider which could possibly also affect other gliders of the same model. The notices contain instructions on how the affected gliders can be inspected for possible faults and the steps required to rectify them.

Fresh Breeze publishes on its website any technical safety notices and airworthiness instructions which are issued in respect of Fresh Breeze products. The paraglider owner is responsible for carrying out the action required by the safety notice.

Safety notices are issued by the certification agencies and also published on the relevant websites. You should therefore visit on a regular basis the safety pages of the certification agencies and keep up-to-date with new safety notices which cover any products relating to paragliding.

## Liability, warranty exclusion and operating limitations

Use of the paraglider is at the pilot's own risk!

The manufacturer cannot be held liable for any personal injury or material damage which arises in connection with Fresh Breeze paragliders. The certification and warranty shall be rendered invalid if there are changes of any kind (incl. paraglider design or changes to the brake lines beyond the permissible tolerance levels) or incorrect repairs to the glider, or if any inspections are missed (annual and 2-yearly check).

Pilots are responsible for their own safety and must ensure that the airworthiness of the glider is checked prior to every flight. The pilot should launch only if the paraglider is airworthy. In addition, when flying outside of Germany, pilots must observe the relevant regulations in each country.

The glider may only be used if the pilot has a licence which is valid for the area or is flying under the supervision of an approved flying instructor. There shall be no liability on the part of third parties, in particular the manufacturer and the dealer.

### **Liability and warranty exclusion**

In terms of the warranty and guarantee conditions, the paraglider may not be flown if any of the following situations exists:

- the inspection period has expired, or the inspection has been carried out by the pilot him/herself or by an unauthorised inspector
- the pilot has incorrect or inadequate equipment (reserve, protection, helmet etc)
- the glider is used for winch-launching with a winch which has not been inspected or by non-licensed pilots and/or winch operators
- the pilot has insufficient experience or training

### **Operating limitations**

The paraglider must be operated only within the operating limits. These are exceeded, if one or more of the following points are complied:

- the take-off weight is not within the permissible weight range
- the glider is flown in rain or drizzle, cloud, fog and / or snow
- the canopy is wet
- there are turbulent weather conditions or wind speeds on launch higher than 2/3 of the maximum flyable airspeed of the glider (varies according to the total take-off weight)
- air temperature below -10°C and above 50°C
- the glider is used for aerobatics/extreme flying or flight manoeuvres at an angle greater than 90°
- there have been modifications to the canopy, lines or risers which have not been approved

## **Glider categories and guidelines**

The German Hang gliding and Paragliding Association (DHV) and its safety division have developed guidelines which are based on many years of analysing paraglider accidents and on the experience of flying schools, flying instructors and safety officers. These guidelines should help pilots to select the appropriate glider classification for their particular level of flying ability. The information below relates to the classification in EN/LTF-certification. There is also further information on the website of the relevant licensing body.

The complexity of the paraglider system means that it is not possible to give any more than a partial description of the glider's flight behaviour and reactions to disturbances. Even a small

alteration in individual parameters can result in flight behaviour which is markedly modified and different from the description given.

**WARNING: The descriptions of flight characteristics contained in this Manual are all based on experiences from the test flights, which were carried out under standardised conditions. The classification is merely a description of the reactions to these standard tests.**

#### **DGAC certification**

The APAX evo received ULM Class 1 registration (DGAC)

#### **EN/LTF certification**

The APAX evo received EN-A classification in the final classification by the licensing body.

#### **Description of flight characteristics**

“Paragliders with maximum passive safety and extremely forgiving flying characteristics. Gliders with good resistance to departures from normal flight.”

#### **Target group and recommended flying experience**

“For all pilots, from beginners to cross country flyers, who want the highest passive safety standards in their canopy. Pilots who fly less than 15-20 hours airtime per year are recommended to only fly canopies with this rating.”

#### **Description of pilot skills required**

“Designed for all pilots including pilots under all levels of training.”

#### **Suitability for training**

The APAX evo is suitable for use as a training glider.

## Before the first flight

**WARNING: Your instructor, dealer or a specialist must test-fly and inspect the paraglider before your first flight. The test-flight must be recorded on the paraglider information label.**

For motorized flight, the engine, harness, rescue equipment and supporting structure have to be checked individually for their compatibility. The compatibility of the engine with the other components must be checked and confirmed if necessary. If you have any further questions, please contact the supplier of your engine.

### Harness

For free flight the APAX evo is certified for use with all harnesses with variable cross-bracing (GH type). Practically all modern harnesses are GH type harnesses. Older harnesses with fixed cross-bracing (GX type) are not certified and should not be used. Check with the manufacturer of the harness or your paragliding instructor if in doubt whether your harness is a GH or GX type harness.

It's important for your comfort and safety to fly with a suitable harness that is properly adjusted. When choosing a harness, remember that the height of the attachment points (i.e. distance from the carabiners to the seat plate) affects the sensitivity of the glider and the relative brake travel. The lower (shorter) the attachment points, the more sensitive the glider is to weightshift.

The adjustment of the harness chest strap controls the distance between carabiners and affects the handling and stability of the glider. Excessive tightening of the chest strap increases stability but also the risk of riser twists following glider collapses. It also increases the likelihood of getting collapses due to poor feedback from the glider. The risk of twisting is also strongly influenced by the seating position of the pilot. Flying in a laid back (reclined) position makes it much more difficult to react in time to prevent riser twisting. With the chest strap in a more closed position the glider also has more tendency to maintain a stable spiral. With the chest strap in a more open position, feedback from the glider is increased but stability is decreased.

Fresh Breeze are developed with Fresh Breeze harnesses, which have an attachment point of approximately 40-48cm (depending on size and model). EN/LTF certification test flights are carried out with the horizontal distance between the harness attachment points (measured between connector centrelines) set depending on the total weight in flight as follows:

Total weight in flight	< 80 kg	80 to 100 kg	> 100 kg
Width	40 ± 2 cm	44 ± 2 cm	48 ± 2 cm

We recommend adjusting the distance of the chest strap according to the table and, if necessary, to adapt easily. In general, the carabiner distance should not be set too narrow!

For flight comfort and safety it is very important that you fly with a suitable, properly adjusted harness. In practice, it turns out that few pilots have a harness that suits their flying

style and paraglider. If you have any questions or doubts regarding the use of your harness with the APAX evo, please contact a Fresh Breeze dealer or Fresh Breeze directly.

**NOTE: Don't adjust your leg and shoulder straps too tightly. If you do, you may have difficulty sitting back into your harness after take-off. If the harness is setup incorrectly, the pilot must move the focus to the correct position during thermal flying and turbulence through active body use.**

### Reserve

It is a mandatory requirement to carry an approved reserve for use in emergency situations where the paraglider fails and recovery is not possible, for example after colliding with another aerial sports craft.

In choosing a reserve, you should be careful that you remain within the specified take-off weight. The reserve is fitted according to the manufacturer's instructions.

### Weight range

Be sure to fly your glider within the certified weight range given in the Technical Specification section. The weight refers to take-off weight: pilot, incl. clothing, engine, glider, harness and equipment.

The reactions are quite different at the upper- or lower weight range. If you fly at a high wing- loading, the glider shows dynamic flight behaviour with fast reactions. This may be an advantage in strong wind conditions, but considerable pilot skill is required.

The dynamics are reduced somewhat in the middle and lower part of the weight range.

### Overload

The EN 926-2:2013 describes the weight measurement with: "All weights are subject to an acceptable tolerance of  $\pm 2\text{kg}$ ". Therefore a slight overload of the wing would be within EN tolerances. However, flying over the maximum weight further increases the dynamic flight behaviour. In small bubbles, the wing has more horizontal momentum and less tendency towards lifting. A test flight is always recommended if in doubt.

**Note: Check your total flying weight by standing on weighing scales with all your flying equipment including your motor unit. Remember that ballast can also be used to adjust wing loading to the conditions.**

### First flight

Carry out your first flights only during stable weather, and in a familiar area or on a training slope. You should steer gently and carefully to begin with so that you can become accustomed to the reactions of the glider without stress.

# Flying the APAX evo

The flight practice for motorized operation and free flying is identical in many respects. Therefore, they are considered together in this manual. Differences and special features are indicated either directly or in the description of the respective operating mode.

Fresh Breeze cannot ensure that the flight behavior described in this chapter is accurate to all engines used with the APAX evo. The compatibility of a new combination must therefore be confirmed by a test flight by an accredited K-pilot. Compatibility flights can be requested by the manufacturer of the engine or in the form of a single sample test by the pilot himself at a testing house.

## Preparation for launch

Follow a consistent routine every time you fly. This is very important for safety. We recommend the following procedure:

### Material check

Check the following condition of your paraglider and other flying equipment before every flight:

- Is the glider fabric free from tears or other damage?
- Are the lines free from knots, tangles or other damage?
- Brake lines freely and firmly connected to the handle?
- Correct adjustment of the brake lines length?
- Are the maillons connecting the lines and risers closed and secured?
- Is the glider dry?
- Are the risers and seams in good condition?
- Is your harness in good condition?
- Is your rescue handle secure and rescue pin in?

### Pre-flight check

A careful pre-flight check is required for any type of aircraft. Make sure that you exercise the same level of care each time carry out the check.

- Once you have arrived at the take-off, you should first take a look at the conditions: observe wind speed and wind direction, airspace, turbulence and thermal cycles.
- Check your engine, paraglider, harness, rescue handle and pin, helmet and other equipment.
- Carry out the preflight control check of the engine.
- Choose a wide starting place, as uniform as possible and free from obstacles.
- Put on your harness and be sure to close the leg straps! Then put on your helmet.
- Place the paraglider in a curved shape and sort the lines.
- Connect the riser to the harness carabiners. Make sure that the carabiners are closed and that nothing is twisted.
- Connect the speed system of the riser and harness with the Brummel hooks.

- Check one last time that there are no knots in the lines, nothing is twisted and that the lines are not caught in vegetation or rocks. You must be particularly attentive in lighter winds.

**WARNING: If there are obvious creases in the glider as a result of tight packing or long term storage, carry out some practice inflations before your first launch and smooth out the trailing edge a little. This ensures that the flow profile is correct during launch. This is particularly important in low temperatures.**

### Start check

The start check is carried out immediately before launch to check the most important safety points once again. It should always be carried out in the same sequence so that nothing is overlooked. The points are:

1. Is your personal equipment in order (engine, harness, carabiners, reserve, helmet) and are all straps done up?
2. Is the canopy arranged in a half-moon shape and are all the air intakes open?
3. Are all the lines untangled and are any lines under the canopy?
4. Are the trimmer positions correct and symmetrical?
5. Does the weather, in particular wind direction and strength, allow a safe flight?
6. Is the propeller free?
7. Does the engine deliver full power?
8. Are the airspace and launch area clear?

### General warnings and advice

Before flying, check the following:

- Are you in good physical and mental condition?
- Are you familiar and compliant with all applicable laws and regulations in your area?
- Are you within the certified weight range?
- Do you have the necessary insurance cover?
- Are you briefed thoroughly about the site, airspace and expected weather conditions of the day?
- Is your equipment and choice of site suitable for your level of experience?
- Do you have a suitable helmet, gloves, boots, eyewear and adequate clothing?
- Are you carrying some form of identification, in case of an accident? Take along a radio and mobile phone if possible.
- Do you fully understand how to safely fly your new wing? If not, have your instructor or dealer explain anything you are not sure about.

## Launching

The APAX evo has smooth and progressive inflation characteristics with no tendency to hang back or shoot forwards.

### Forward launch

We recommend a forward launch in nil to light winds. Pull up the glider with the lines stretched. It is not necessary to use any momentum to launch the APAX evo and/or to start running with slack lines.

Lean forward positively and guide the 'A' risers smoothly upwards in an arc, keeping your elbows bent and hands at the level of the shoulders. The APAX evo will inflate easily—there is no need to aggressively pull or push the risers. As the glider comes above your head, make sure that the canopy is correctly inflated and that there are no knots or tangles in the lines. Check that the airspace and visibility are clear. If everything is in order, move forward decisively off the take-off.

### Additional information for starting with engine

Avoid lateral rotations with the upper body during the inflation, as otherwise the lines may fall into the propeller. If the glider does not rise in the middle, you should use the risers instead of the brakes to compensate. This prevents the wing falling down on one side. During the take-off run, it is important to stay under the glider and follow the take-off direction. If both risers have a steady tension and the glider is above the pilot, the control view is carried out. Check that the canopy is completely inflated and that no lines are twisted or tangled. Do not stop and do not turn the upper body. If the wing breaks out sideways or falls back to the rear, stop the engine and abort the take-off.

After the control view, the full motor thrust is used. A slight back position supports the take-off as the full engine power is used. Release the risers and accelerate until the APAX evo is lifted.

When you launch forwards, keep the following points in mind:

- If the cage of the engine is not stable enough, the risers can deform the cage and push the propeller while it is being pulled. Pay attention to it before you fly with maximum power
- Apply the brake evenly and moderately during the take-off
- Do not start before the wing is over your head. Opening the throttle too soon can cause dangerous pendulum movements
- Just sit in your harness when you are a few meters in the air
- Low suspension for back motors usually allows easier start-up

### Reverse launch

The APAX evo is suitable for reverse launching from light to strong wind speeds. Take the brakes and turn around to face the wing. Pass one set of risers over your head as you turn. Make sure the lines are free from knots or tangles. Check that the airspace and visibility are clear. Gently pull up the glider in an arc with the 'A' risers. When the glider is overhead, brake it gently if necessary, turn around and launch.



This method of launch makes it easier for the pilot to control the rising of the canopy and is therefore recommended in strong winds.

#### **Additional information for reverse launch with engine**

You can hook in the glider as for a forward launch, and then turn around when the motor is switched off. Run the lines over the cage and then make sure that all the lines are free. As with the forward start, the correct combination of braking and engine power is important to achieve the best speed and the best climb. The right technique of hooking the riser in, pulling up the glider and turning is very important for reverse launching. This must be controlled by the pilot before executing it with the engine running.

#### **Tips for paragliding take-off**

- If the glider comes up slightly off-centre, make small corrections by moving towards the lower side.
- In stronger winds, be prepared to take a couple of steps towards the canopy as it inflates and rises.
- Launch the wing by pulling upwards in an arc, not towards you.
- Practice ground-handling regularly to improve your take-off skills!
- The pilot must work actively to keep the glider on the ground in higher winds (wind speeds from approximately 6 m/s), otherwise the glider may rise above the pilot unintentionally.

**Note: During reverse launch and ground handling, care should be taken that the brake lines do not rub over the riser. This may cause damage to the riser or brake lines.**

#### **Knots or loops in the lines**

If you have taken off with a knot in the lines, you should wait until you have enough height and distance from other pilots before you attempt to loosen the knot. Control with weight shift and gently brake the opposite side before attempting to open the knotted side by pulling on the brake line. Make sure you don't fly too slowly and stall or spin the paraglider. If the knot does not open, land safely as soon as possible.

## **The initial climb-out**

After a successful launch, continue into wind using the brakes to regulate the rate of climb. Do not try to climb too steeply. A powered paraglider behaves more like an airplane than a paraglider. If there are no obstacles, it is much safer (and more impressive for the spectators as well) to fly level for a while after take-off and pick up speed before converting speed to height with a brief application of the brakes.

An additional reason not to climb too fast is related to the risk of low-level engine failure. Although the APAX evo does not hang back during a steep climb as much as some other wings, a stall is still more likely at low speed and high pitch angles. In addition, you should always be in a good position to land in case of engine trouble. Don't take unnecessary risks and fly with a wide margin of error.

Depending on the characteristics of your engine, once in the air you may be faced with a torque effect. This may cause the wing to turn, so be prepared to counteract this effect with suitable braking or anti-torque strap. If such a situation occurs during the climb-out with "slow" trims and maximum power, be pay attention to the risk of stalling. Safe operations and management of your engine depend on your knowledge and equipment.

## Engine-induced oscillations

Certain configurations of weight, propeller diameter and engine power may cause serious oscillations. The pilot is lifted to one side by the torque effect, swings down due to his weight and is then lifted again and so on. To counter this effect:

- change the throttle setting
- counteract the pendulum movement with a slight brake input
- adjust the trimmers to dampen the oscillation

These oscillations typically occur at full power. The greater the engine power and propeller diameter, the greater will be the oscillations. In addition, late or inappropriate pilot reactions may worsen the problem instead of solving it. Most inexperienced pilots tend to overreact, leading to "pilot-induced" oscillations. In the majority of cases the best way to handle this is to release the throttle and release the brakes.

## In-flight characteristics

### Cruising flight

Once you have reached a satisfactory altitude after take-off, you can turn in your chosen direction, open the trimmers if they were previously in the "slow" configuration and go "hands-up" on the brakes. If conditions are strong, you will need to fly actively.

For each paramotor, you must make an adjustment of the length of your brakes to prevent them interfering with the propellers when you do release in flight.

If you have a vario or altimeter, keep an eye on it. In level flight, it is very easy to climb unintentionally. The instruments exist to help you maximize your speed and fuel economy. Naturally, the safety and success of each flight will depend on your piloting set-up, and thanks to its ability to fly safely without constant piloting adjustments, the APAX evo will leave you all the comfort to adjust everything properly.

### Normal flight

"Trim speed" (brakes fully released) is the best glide speed in still air. The brake lines are used to adjust the speed according to the flight situation in order to ensure optimum performance and safety.

Minimum sink speed on the APAX evo is achieved by light braking. In a normal flying position (knees parallel to the ground and your body slightly reclined), your hands should be holding the brakes at a level between your eyes and your shoulders. Use this speed for thermalling and ridge soaring.

Stall speed is approached by bringing your hands towards your hips. Notice the decreased wind noise and a significant increase in brake pressure.

**WARNING: Flying too slowly close to stall speed increases the risk of an unintentional asymmetric or full stall. This speed range should therefore be avoided and used only on landing during the final stage of the flare.**

### Accelerated flight

Once you have become accustomed to flying the APAX evo, you can practice using the trimmer (motorized flying only) and speed system (free flying and motorized flying), which allows improved glide in headwinds and greater penetration in strong winds. During your first few flights, familiarize yourself with your glider's speed range and corresponding brake positions and pressures.

When flying accelerated the glider reacts much faster to a collapse. Also the glider reacts more radically when a collapse happens during accelerated flight compared to flying at trim speed.

Apply the speed system by pushing the speed bar progressively with your feet. Avoid flying accelerated near the ground, and be careful using the accelerator in turbulence. If you do encounter a collapse while using the accelerator, immediately step off the bar completely before taking any other corrective actions.

**WARNING: Symmetrical braking with the main brake with open trimmers creates an extremely unstable profile and there is a danger of a front stall or other extreme flight maneuvers. In addition, never apply brakes when using the speed bar.**

### Turning

The APAX evo performs best in turns when it is flown with sufficient speed and weight-shifting. Enter a turn with good airspeed, weightshift and then apply the brake. Once established in the turn, regulate your speed and turn radius with weightshift and the outer brake. Too much braking increases the sink rate.

Make your first turns gradual and progressive. Also remember that your harness and its set-up has an influence of the turning behaviour of the wing. The APAX evo has extremely low negative tendency, so it can also be turned in a tight area by carefully pulling the inside brake line.

If the brakes are applied more, the bank attitude increases and the glider will fly a fast turn increasing in steepness, which will eventually become a spiral dive (further information on this is in the section "Spiral Dive").

### Active flying

Practice active flying to eliminate collapses in all but the most turbulent conditions.

Keep tension on the brakes approximately equal to the weight of your arms. This allows you to stay relaxed and sensitively feel the internal pressure in the wing through the brakes. If you feel a loss of pressure in one or both sides of the wing, quickly apply the appropriate brake(s) to regain pressure. Release the brake promptly as soon as normal pressure is resumed.

If you miss the above timing and get a collapse, be sure to first raise your hands and release the brakes before considering any other corrective actions.

The APAX evo has excellent pitch stability. Nonetheless, in turbulence or during manoeuvres, the glider may pitch. If the glider pitches in front of you, apply brake to slow it down. If the glider drops behind you, ease off the brakes to allow it to speed up. The objective is to reduce the pendulum effect by adjusting the speed of your glider so that glider and pilot are travelling at the same speed.

The same general principles also apply when gliding on bar.

Summary: "Active flying"

- The pilot sits upright in his harness, his view goes in the direction of the flight.
- He constantly responds to increasing and decreasing brake pressures with the aim of maintaining a constant pressure on the brake lines.
- The further in front of you the glider pitches, the larger the brake input required, but for a shorter duration.
- When brake pressures decrease, brake firmly; when brake pressures increase, ease off the brakes.

**WARNING: Never release the brakes when the glider is behind you but accelerating forwards.**

## Rapid descent techniques

Many flying situations call for a very rapid descent to avoid a dangerous situation, e.g. the up current from a cumulus cloud, an approaching cold front or a storm front.

Rapid descent methods should all be practised in calm conditions and at sufficient altitude so that a pilot is then able to employ them effectively if extreme conditions arise. Rapid descent techniques are divided into three different manoeuvres which increase the sink rate in a safe and controllable manner.

All of these options will also strain your motor paraglider and should be avoided if you want to preserve your motor paraglider. We recommend that you practice the rapid descent techniques under professional guidance during a safety training course.

### Spiral dives

The spiral dive is the most effective method for making a rapid descent, and can allow sink rates of up to 20 m/s to be reached. It is suitable where there is a high ascent rate and little wind.

The APAX evo fulfils the EN spiral dive requirements and has no tendency to remain in a stable spiral dive under normal conditions. The certification test flights are carried out with a defined carabiner distance (see chapter "Harness"). Deviations from this setting, unapproved harnesses or spirals with excessive sink can change the maneuver considerably; pilot action may be required. In such cases, exit the spiral by weightshifting to the outside and progressively applying the outside brake.

Before entering a spiral, make sure you have adequate height for recovery. To enter the spiral dive, weight shift and progressively apply the inside brake until the glider enters the

spiral. As the glider accelerates into the spiral, centre your weight and control your rate of descent with weightshift and outer brake.

To exit the spiral, check your weight is centred (or slightly towards the outside) and progressively release the inside brake. As the glider starts to exit the spiral, you may also choose to reduce the pendulum moment by briefly re-applying the inside brake.

**WARNING: In the spiral dive, very high turn speeds can be reached with an increase in acceleration due to gravity (up to over 6g), so exercise care when attempting this manoeuvre. Take note of the following:**

- **The high g-forces experienced in steep or prolonged spirals may result in disorientation or even loss of consciousness.**
- **Always maintain ground clearance of 150 – 200m. The manoeuvre must be exited at this height above ground.**
- **Do not attempt to enter a spiral dive while in big ears. This places excessive forces on the paraglider and may result in structural failure.**
- **Frequent steep spirals may cause premature aging of your wing.**
- **Spirals with descent rates above 10 m/s are not recommended.**

**WARNING: You must immediately deploy your reserve if you lose control of the glider and the sink rate and find yourself in a stable spiral. The high g-forces in the spiral may rapidly lead to a loss of consciousness which prevent later deployment of your reserve.**

### **B-Stall**

In the B-stall, a stall is provoked and the paraglider sinks vertically with a sink rate of approx. 8 m/s. The B-stall is suitable when there is an average ascent rate and little wind.

To enter a B-stall, grasp both of the B-risers on the mallions at the coloured mark. Pull both B-risers evenly down until the airflow is broken and the wing goes completely into vertical descent flight mode. The B-risers should then be held in this position to ensure a gentle descent.

Pull down the B-risers only until there is no airflow. If they are pulled down any further, the glider could go into a horseshoe. Check before and during the B-stall that the airspace beneath you is clear.

For recovery return the B-risers quickly and evenly into their normal position. The glider may go into a deep stall if they are released too slowly or into a negative spin if not released symmetrically. If you enter a deep stall, increase the speed by using the speed system or by pulling the A-risers forward.

**WARNING: The canopy speeds up after the B-risers have been released until the airflow returns. Under no circumstances should the brakes be applied at this time. This manoeuvre should be avoided at low temperatures. Pilots should be aware that this considerably increases the tendency to deep stall.**

## Big ears

Big ears are the simplest method for rapid descent and have a sink rate of 3-5m/s. The advantage of big ears is that the glider continues to fly straight, meaning that a danger area can be avoided. It is even possible to land using big ears, for example on a top-landing to compensate for the updraft.

The wing-loading increases by the reduction in the wing's surface area, the wing becomes more stable against collapses in turbulence. Nevertheless, the air resistance of the wing also increases, and it flies more slowly and closer to the stall limit. To counter this and to increase the effectiveness of the sink, the speed bar is generally also used in combination with big ears.

Start the "big ears" manoeuvre by pulling both outer A-lines downwards. This should fold down a sufficiently large part of the wing tips that the pilot does not then have to counteract the tendency to reopen. If the surface area which tucks under is too small ("ears" flapping, high holding forces), re-open the ears and then pull down and hold the A-lines a little more firmly.

The brake lines are held steady and the pilot uses weightshift to steer the paraglider. You can now descend safely on the stable middle part of the wing. The brakes must not be shortened during the manoeuvre, e.g. by wrapping the brake line. Do not use the brakes unless you intend to exit big ears.

Once in big ears, you can increase your sink rate and forward speed by applying the speed bar. Always apply the speed bar after entering big ears, never before.

To exit big ears, release both A lines at the same time. Apply brake progressively one side at a time to help re-inflation. Be careful not brake too deeply on both sides at the same time as this could cause a stall.

**WARNING: Never use big ears with strong motor thrust. The resistance of the paraglider canopy increases the angle of inclination and the glider can enter into the stall.**

**The technique of big ears causes a higher load for the line groups which are still weight-bearing. Therefore, do not fly any extreme manoeuvres with big ears.**

**This manoeuvre should be avoided in low temperatures. Pilots should be aware that this increases the tendency to deep stall.**

## Landing

The APAX evo requires no specific techniques for landing. Land on a large and obstacle-free landing site. Observe the wind direction and strength, and any hazards in, or near, the landing area.

Fly a proper landing circuit and plan your final approach well in advance. Never perform steep turns near the ground. This may cause the pilot to pendulum dangerously.

Actively choose a spot on the ground in the landing field to aim for. Adopt an upright position in your harness by sliding your legs forward, ready to make contact with the ground.

Make your final approach as straight as possible. Fly at around trim speed (keep just enough tension on the brakes to keep contact with the wing, a little more tension in turbulent

air). Once you come within a metre of the ground, brake progressively to maintain a level flight path.

In nil or light winds, flare positively to reduce your ground speed to a minimum. Again: higher wing loading results in a higher ground speed. Make sure you always land into the wind. In nil wind situations, be prepared to run fast. In stronger winds, use only the minimum amount of flare necessary to sufficiently minimize your vertical and horizontal speed. If you flare too hard in strong winds, the glider will climb rapidly upwards and backwards, and you may get injured.

In strong winds, turn to face your wing as soon as your feet touch the ground. Immediately stall the glider as rapidly as possible with the brakes or rear risers. Be prepared to run towards your wing.

**NOTE: The APAX evo has good basic speed, good glide and excellent energy retention. Give yourself enough space and bleed off speed gradually before flaring.**

**WARNING: Although the APAX evo is remarkably maneuverable even in the lower half of the brake range, do not be tempted to make an excessively slow landing approach. Strong gusts and/or a steep wind gradient may cause any glider to suddenly lose altitude, or even stall.**

**Never let the leading edge crash to the ground, you risk damaging the seams and/or internal structure. Ground handling (especially on rough surfaces) will accelerate the ageing process of your wing.**

#### **Additional information for landing with motor**

For landings, regardless of whether they are carried out with or without engine power, observe the following points:

- Take a closer look at the landing/airfield before you take-off
- Before landing, check the wind direction and speed
- Train landing flights as often as possible to become familiar with the APAX evo
- Landing without engine power requires less space
- In the case of strong headwinds, apply the brake gently. After landing, turn in the direction of the glider if there is a danger of being pulled backward from the glider and falling
- Steep turns and rapid changes of direction must be avoided before landing due to the oscillating movements associated with them.

## Landing with standing propeller

Landing with standing propeller reduces the chances of damaging the propeller on landing, but on the other hand there is only one possible attempt - so the landing must be done correctly! With or without the engine, the APAX evo reacts better with turbulence with open trimmers. Therefore, if the conditions are strong, it is better to make an approach with greater speed, and use plenty of space to bleed off the speed before touching the ground (like in

hang gliding). The APAX evo has good energy retention, a long final approach should be used to store energy for the flare.

If you are attempting precision landings or landing in nil wind, it is recommended to use the trimmers to half or completely closed (maximum lift). Your performance in sink rate will be better. This choice is even more crucial at a high wing loading.

## Landing with trailing throttle

Make a flat approach with the engine idling, then stabilize and lose speed before the final approach. Immediately after touchdown, switch off the engine. The main advantage of this procedure is the possibility to abort the landing and repeat the approach in case of bad judgment. However, if you forget to turn off the engine before the wing deflates, there is a considerable risk of damaging your propeller, catching lines, or even injuring yourself by falling with your gear on.

## Additional information for motorized flying

The following points should be noted when flying with the APAX evo as paramotor:

- Never place the engine downwind of your sail, to avoid trouble due to possible gusts
- Check the gaskets of all fuel pipes for leakage
- Check whether you are carrying enough fuel for the planned flight
- Inspect equipment and harness for loose parts that might fall into the propeller
- Before each flight, carefully follow the individual points of the pre-flight check
- Immediately after landing, turn off the engine to avoid damage to the leash and propeller.
- Avoid flights over water and power lines, do not fly between trees and generally avoid areas where a motor failure does not offer a landing option
- If you recognize a change of the engine noise or increased vibration, you should land immediately to fix the problem.
- Keep in mind that engines interfere with noise. Therefore avoid low altitudes over towns

## Range of use

The APAX evo was developed and tested for use solely as a paraglider for motorized flying, foot launch and for winch launch. Any use other than as intended is prohibited.

### **Towing**

The APAX evo is suitable for towing and the procedure for a towing is similar in its initial stages to a forwards launch. After the canopy has been pulled up to its highest point, the pilot rises from the ground by the tension of the tow line. Under no circumstances should the “start” command be given before the glider is completely under control.

Major changes to direction should be avoided during the launch phase and before reaching a safe altitude. After having left the ground, the pilot will be slowly towed in a flat angle up to the safe altitude of 50 m. During this phase, the pilot must remain ready to run and must not



sit back in the harness, so that it is possible to land safely in the event that the winch or tow rope fails. Ensure that the glider is flown with open brakes so that the angle of attack is not increased further by the brakes.

On a winch launch, the glider should if possible be steered only by weight-shifting. Brisk, forceful steering input with the brakes can be used to help correct direction, without braking the glider too much and stalling it.

You are responsible for ensuring that your towing operations are safe and in accordance with any applicable tow regulations. Make sure you have appropriate tow training and use a suitable harness attachment and release mechanism. Always use an approved tow system and qualified tow operator.

**NOTE: Make sure your wing is overhead at the start of your tow. Be careful not to over-control the wing as it reacts differently to control inputs when on tow.**

Towing requires special training and special regulations must be observed. These are:

- The pilot must have completed the appropriate training and hold a licence.
- The winch and release must have a certificate of compliance which covers the towing of paragliders.
- The winch operator must have undertaken training which includes the towing of paragliders.
- The APAX evo may not be towed with a towline tension of more than 90 daN.
- The paraglider must not under any circumstances be towed by motor vehicle or motor boat etc if you do not have the appropriate towing equipment and a suitable winch operator.

**WARNING: The most common cause of stall on winch is releasing the A-risers too early while the glider is rising. The pilot should ensure that the canopy is above him before the “start” command is given.**

**Any changes to direction using the brakes should not be carried out until the canopy is already above the pilot, as too much brake can cause the glider to fall down again or be towed in a non-flyable condition.**

#### Attaching the towline release system

The optimal attachment point for the towline release should be as close as possible to the system’s centre of gravity. On a paraglider the ideal attachment point is level with the harness attachment point or directly on the risers. It is not essential to use a suitable tow adaptor, but it is recommended as it provides the pilot with greater safety during the towing phase.

Fresh Breeze offers a safe, lightweight and easy tow release system, “Towing bridle”. It attaches to the main carabiner and engages the speed system to enhance takeoff safety and climb performance. It is a two piece tow bridle for use with front mount reserves – with a three ring release. The bridle utilizes a straight pin which is preferred for reverse inflation style launches as the odds of a premature release are greatly reduced over curved pin systems.

If a webbing release system is used, there is an increased risk of lockout. This means that the glider does not fly towards the winch and control pressure by the pilot is not sufficient to

correct this. You should therefore check regularly the position and alignment of the glider to the pilot during towing, as the towing rope hangpoint located well in front of the pilot encourages the glider to turn, and this may not be detected.

**WARNING: If you are using a front-mounted reserve system, it is important to ensure before first launch that it can be deployed without any obstruction. If this is not the case, then only a webbing release system should be used.**

**WARNING: When using rigid tow releases, the release/shackle distance should be extended sufficiently (cord or webbing strap) and the release must be secured with a retaining cord so that it does not fly back (in the event of towline failure).**

**When using the release system attachment, ensure that the distance between the risers is not reduced (risk of twist).**

### **Tandem paragliding**

The APAX evo is not intended for tandem use.

### **Aerobatics**

Your APAX evo was not developed or tested to be used for aerobatics (acro). By engaging in such an activity, you voluntarily assume an increased risk of injury or death.

Any type of acrobatic manoeuvre at all on the APAX evo is contrary to law and illegal. The pilot would be putting his/her life at risk. Aerobatics involves a risk of unpredictable flight attitudes, which could lead to damage to material and structural failure.

# Dangerous situations and extreme flying

**WARNING: Extreme flight maneuvers with a full throttle engine are life-threatening and cannot be tested! The following chapter describes how to avoid and correct extreme situations. The descriptions of the test maneuvers refer to the starting weight without engine.**

## Dangerous situations

Pilot error, extreme wind conditions or turbulence which goes unnoticed by the pilot for too long may leave the wing in an unusual flying position, requiring special reaction and skills on the part of the pilot. The best way to learn how to react calmly and correctly in a serious situation is to attend safety training, where you will learn how to manage extreme situations under the guidance of a professional.

Ground-training is another safe and effective method of familiarising yourself with your glider's reactions. Launch can be practised, as can small flying manoeuvres, such as stall, asymmetric collapse, front stall etc.

Any pilot who flies in turbulent conditions or who makes an error in handling the glider is at risk of getting into an extreme situation. All of the extreme flight figures and flight attitudes described here are dangerous if they are carried out with inadequate knowledge, without the right safety altitude or without training.

Always keep within the recommended limits. Avoid aerobatics and extreme loading such as spirals and big ears. This will prevent accidents and avoid overloading the glider.

In turbulent conditions, always keep enough distance from rock faces and other obstacles. Time and sufficient altitude are needed to recover from extreme situations.

**WARNING: Deploy your reserve if the corrective manoeuvres described in the following sections do not return the glider to a controllable flying position or if there is not enough altitude for correction.**

## SIV / Safety training

Due to the advanced design features of the paraglider, collapses incorrectly induced by the pilot may have more significant consequences than collapses which may occur in the course of normal flight (due to turbulence etc.).

Taking part in safety training is in principle advisable in order to familiarise yourself with your glider and the correct reactions in extreme situations. However, safety training also subjects your equipment to extreme loads.

### Material stress

During a safety training course, avoid subjecting the materials of your paraglider to excessive stress. Uncontrolled flight positions may occur which are outside the manufacturer limits of the paraglider. This may cause premature ageing, or even structural failure.

Stretching of the lines and/or canopy material after safety training can lead to a general deterioration in flight characteristics.

Damage as a result of safety training is not covered by the warranty.

**WARNING: Be sure to perform any simulated collapses correctly. In particular, full speed asymmetric collapses performed incorrectly may result in unpredictable collapse behaviour and impulsive re-opening. This behaviour may require considerable pilot skill to manage safely.**

## Canopy Collapses

### Asymmetric collapses

Asymmetric collapses are caused by the stagnation point moving to the trailing edge of the glider. A negative angle of attack makes part of the canopy collapse and tuck under, and the glider may plunge down, turn away or spin.

Use active flying techniques to virtually eliminate collapses in normal flying conditions. Nevertheless, if you do get a collapse, stabilize your weight in your harness and do not allow yourself to fall to the collapsed side. Control your course with weightshift and a little outside brake. The deflation should re-inflate spontaneously.

If the deflation does not re-inflate spontaneously, apply brake on the closed side in a smooth, progressive pumping action. Be sure not to apply too much brake too slowly as this may risk a stall. Remember that a partly collapsed wing has a reduced surface area and thus a higher stall speed.

If you get a collapse while in accelerated flight, release the speed bar immediately. Then apply the normal procedure for unaccelerated asymmetric collapses.

**WARNING: After a large collapse, an instinctive reaction to the body falling is to attempt to hold something. This can result in the pilot unintentionally applying brake, which prevents proper recovery. Always make sure you have fully released the brakes (including any wraps taken) after any incident. Let the glider fly.**

### Cravat / glider wrapped around lines

A cravatte occurs when a wing tip becomes stuck between the glider lines, for example, following a bad take-off preparation. On the APAX evo, a cravatte is unlikely to occur. If you do get a cravatte, first control your direction. Do this by using weightshift and enough counter-brake to stop the turn, but not too much to risk a stall of the opposite side.

A cravat can generally be opened by a short, fast pull on the brake line of the cravatted side. If not, on the APAX evo, there is a separate stabilizer/winglet main line that goes down to the A2 riser. This line usually becomes slack in the event of a cravat. Pull this line down completely until it becomes tight and the cravat normally comes out.

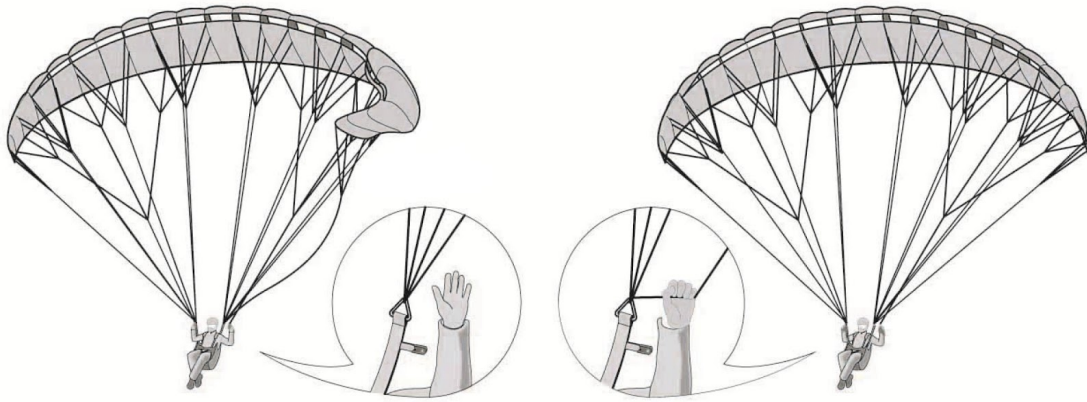


Figure: Grabbing the stabilizer/winglet main line

**WARNING: Counter-steering too strongly on the inflated side of the glider can result in a stall and to further uncontrolled flight manoeuvres (cascade of events).**

**Always remain aware of other aircraft and terrain when dealing with a problem on your wing. Do not hesitate to throw your reserve parachute if the rotation in a cravatte is increasing uncontrollably, especially if you are at low altitude.**

### Symmetric collapses (Front stall)

A negative angle of attack can also cause part or all of the leading edge of the glider to collapse.

Symmetric (frontal) collapses will normally re-open without pilot input. The paraglider will pitch forward and then regain speed. Assist this process if necessary with a symmetric application of the brakes. Take care not to apply too much brake for too long as this may stall the wing.

In the case of extreme front stalls across the entire wing chord, the wing tips may move forward making the glider form a U-shape. Again, recovery is by light symmetrical braking on both sides. Take care that both wing tips return to normal flight evenly.

**WARNING: If you get a collapse while in accelerated flight, release the speed bar immediately. Then apply the normal procedure for unaccelerated asymmetric collapses.**

## Types of stall

When a paraglider flies through the air, a laminar and turbulent boundary layer is created. Extremely dangerous flight configurations can result if the laminar boundary layer is interrupted, with practically the entire airflow along the top surface breaking away. This happens in particular when the angle of attack is too great.

**WARNING: Full stall and spin are manoeuvres which can be fatal if recovery is not correct. These manoeuvres should therefore be avoided. However, it is important to learn how to recognise the indications that a glider is about to stall so that you can take immediate action to prevent it.**

There are three different types of stall in paragliding.

### **Deep stall (parachuting, stable stall)**

Paragliders can go into a deep stall for a variety of reasons: brake lines too short (no slack), old or damaged glider material which therefore has increased level of permeability, altered trim/line length and changes to profile characteristics caused by moisture (e.g. flying in rain). Paragliders have a particular tendency to stall if the wing-loading is too low. An out-of-trim glider, caused by changes in line lengths due to prolonged use, may also have a higher deep stall tendency.

In a deep stall, the airflow from the front reduces and the glider goes into a stable flight attitude without forward momentum. The paraglider sinks almost vertically at 4-5m/s and there is noticeably less flight noise.

The APAX evo has no tendency to get into in a deep stall. Should this nevertheless occur, make sure your brakes are fully released, the glider will then normally recover on its own immediately. If the glider still doesn't recover either put your hands on the A risers and push forward or use the speed bar to accelerate the wing.

If you have a speed system, you can also use it to accelerate, so that the glider goes into a normal flying position from the deep stall. After you have landed, the glider and the length of the lines must be checked.

You can recognise a deep stall by the glider getting "mushy" and the airflow around your ears decreasing. The glider may also compress spanwise. Flying in strong turbulence or exiting a deflation with too much brake applied can cause this situation. A wet glider also has a higher deep stall tendency, and you should do everything you can to avoid flying in the rain. If you do pass through some rain never make big ears! Apply speed bar until you are confident that the wing has dried out.

**WARNING: Never apply the brakes, including any wraps taken, in a deep stall.**

### **Full stall (dynamic stall)**

The full stall happens when the wing partially deflates and loses its arched shape. It is triggered when the maximum possible angle of attack is exceeded. The most common cause is going below the minimum speed or flying near the minimum speed combined with the effects of turbulence.

In full stall, the paraglider loses its forwards travel, surges backwards and deflates. If the brakes are held down, the canopy comes up over the pilot again. The result is an almost vertical descent with a sink rate of approx. 8m/s.

Do not take wraps on the brakes during a full stall. Keep your hands close to the body and under the harness seat plate during the stall. If the canopy is in a stable full stall, it will move forward and backward. To exit the full stall, slowly release the brakes, making sure that this is done symmetrically. After that, the brakes are completely released when the glider canopy is filled and in front of the pilot. This prevents the canopy from pitching too far forward.

As this is done, the canopy accelerates forwards dynamically and picks up speed. Do not brake too soon (otherwise it could go into a full stall again), and be careful to avoid a front stall by making sure that it does not shoot too far forwards.

**WARNING: If the canopy has gone back during the full stall, the brakes must be held down, otherwise the canopy may surge forward and, in an extreme case, end up underneath the pilot. Hold the brakes down until the canopy is above you again.**

### Spin

The spin is a stable flight maneuver, in which one side of the canopy stalls, while the other side continues to fly forward. The glider turns around the stalled side of the wing.

In normal thermal flight, you are not very far from the limits of a spin. If a spin occurs, just let up the brakes and wait for the glider to surge forward, checking it with the brakes if it surges too far. Never release the spin if the glider is far back behind you, always try to release it when the glider is above or in front of you!

Depending on the type of release and the dynamics of the rotary movement, the canopy may dive forward on one side and collapse asymmetrically. In the case of a longer spin, the pilot may release the brakes only at the moment when the glider is in its rotary motion above or in front of the pilot.

If the spin does not stop, check whether you have released the brakes fully, including any wraps!

## Other tips for dangerous situations

### Cascade

Many reserve deployments are a result of a cascade of over-corrections by the pilot. Please note that over-corrections are often worse than no input at all.

### Emergency steering (rear riser steering)

If for some reason the brake lines are not working, e.g. if the knot on the brake handle has come undone or a brake line is defective, the APAX evo can also be steered and landed using the rear risers.

In this case, stall happens more quickly and the pilot must compensate for the changed flight behaviour by pulling carefully on the risers.

### Flying in the rain

We strongly advise you not to fly in the rain on any paraglider including the APAX evo. If you do fly in the rain, be aware that you will have a greater risk of entering a deep stall. It is wise to apply speedbar after passing through rain until you are confident that the glider is flying normally, and has preferably dried out so that there is no longer any risk of deep stall.

Flying in extremely humid weather or in rain is outside of the operating limits of the glider. If you are unable to avoid flying in rain, please observe the following:

- it is advisable to fly with slight acceleration during and after the rain (min. 30% or more)
- use no brake input or as little as possible
- control travel reduces

- avoid tight turns, especially in the final approach. If conditions allow, you should also fly slightly accelerated in this phase
- avoid large angles of attack and the possible early stall near the ground (release the speed bar only slowly)

### **Advertising and adhesives**

Always make sure before attaching advertising to the glider that the adhesive planned will not alter the glider's flight behaviour. If you are in doubt, we recommend that you do not attach the adhesive. Attaching adhesives to the glider which are large, heavy, or made of unsuitable material may result in revocation of the certification.

### **Overloading**

The glider structure is put under high levels of strain in particular on extreme flight manoeuvres, rapid descent methods (spiral dives) or prohibited aerobatic manoeuvres. They considerably accelerate the aging process of the structure and should therefore be avoided. The glider must be inspected earlier than is usually the case if it has been put under more than the usual degree of strain.

### **Sand and salt air**

In many cases, sand and salt air cause the lines and fabric to age much more rapidly. If you often fly near the sea, the glider should be inspected more frequently than normally required.

### **Temperature range**

Temperatures under -10 °C and over +50°C can make the paraglider unfit to fly. The manufacturer's warranty will lapse if the glider is used outside of this temperature range.



# Storing, care, maintenance and repairs

## Storing the paraglider


### Packing the paraglider

The APAX evo can be packed with all the usual methods. To ensure a long life of the profile reinforcements it is very important that you pack the paraglider carefully. It is therefore recommended that you pack the APAX evo as shown in the following illustrations.

The leading edge reinforcements (Mylar and Rigifoil system) on the front edge are placed on top of each other to avoid bending or misshaping them. This method of packing ensures that the leading edge is treated carefully, which will increase the glider's life, performance and launch behaviour.

If the reinforcements have been bent or misshapen, they distort more easily during flight, creating an altered air inflow which can lead to a loss in performance and changes in flight behaviour.

The leading edge reinforcements also perform an important function on launch. Therefore, the less they have been bent, the more easily the glider will inflate and launch.

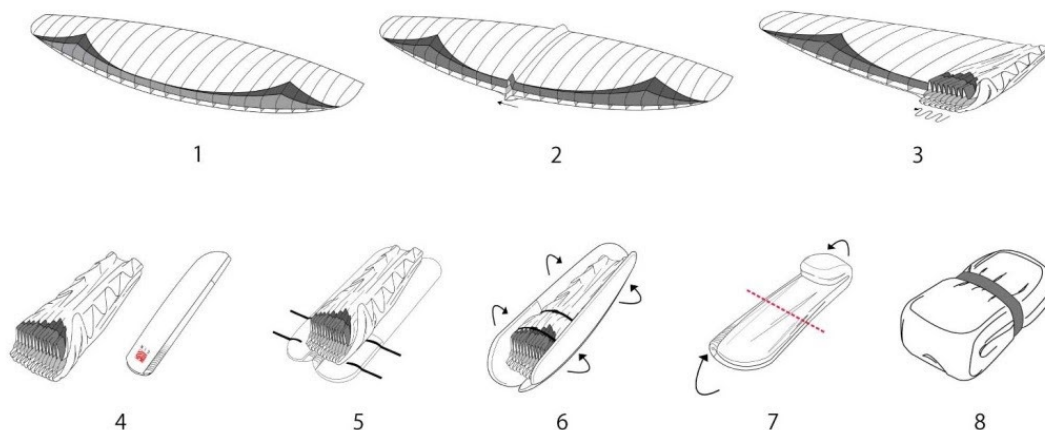

**Figure:** Packing the APAX evo

1. Spread out the paraglider completely on a smooth surface. Do not drag the paraglider across any rough surfaces such as gravel or asphalt. This may damage the seams and surface coating.
2. Start from the center to stack the profiles of each side of the wing on top of each other.
3. Proceed like this until the wing tip. All the ribs on one side are placed one on top of one another, so that the leading edges are not bent.
4. Then continue as in the second step, placing the leading edges of the other side on top of the next until you reach the tip of the glider. Place the concertina bag underneath the glider which has been folded together, so that the ribs are all lying along the length of the concertina bag.

5. The glider is now folded up along its length, and the leading edges are on top of each other without having being bent. Fasten the straps near the leading edges, so that they do not slip, and the straps in the middle and at the end of the glider.
6. Do up the zip, making sure that none of the lines or fabric is caught in the zip.
7. Fold up the glider along its length, with the first fold below the leading edge reinforcements. Pay particular care not to bend any of the rigid reinforcements!
8. Fold the glider again. Then place the compression strap around the glider and fasten it by pulling gently. Make sure that the glider is only loosely folded and is not bent or compressed excessively.

### Rucksack

All Fresh Breeze are delivered with a suitable and durable rucksack, which is easy to pack and offers good ergonomics and comfort.

The backpack type/size included in delivery depends on the paraglider model/size. Therefore, there are different ways to pack the glider, depending on the personal preferences, the harness and the equipment. To maximize carrying comfort, the following method is recommended: First, place the glider inside the harness and then put the top of harness in the bottom of the rucksack with the glider side next to the back of the rucksack.

The tighter the rucksack is packed, the more comfortable it will be to carry. Fresh Breeze offers a wide variety of rucksack sizes and models. They are available as an optional extra for pilots that require it.

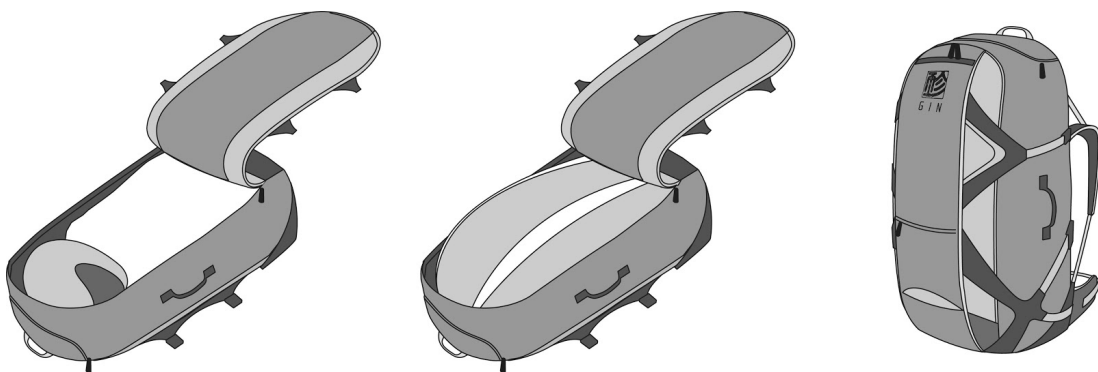


Figure: Packing the rucksack

### Storing and transporting the glider

Even if your paraglider was completely dry when it was packed up after the final flight of the season, for long-term storage you should if possible take it out of the backpack and spread out the canopy a little in a clean, dry place away from direct light. If you do not have the space to do this, then open the backpack, internal bag and belt as much as possible and avoid compressing it. It must be stored at a temperature between 10° and 25° C and in relative humidity between 50 and 75%. Make sure too that the paraglider is not stored in a place where animals such as mice or cats could use it as a place to sleep.

Do not store the paraglider near any chemicals. Petrol, for example, causes the material to disintegrate and can cause considerable damage to your paraglider. When your equipment is in the car boot, keep it as far away as possible from any spare petrol cans or oil containers.

The APAX evo should not be exposed to extreme heat (e.g. in the boot of the car during summer). The heat may cause any moisture present to be pressed through the fabric, thereby damaging the coating. High temperatures accelerate the process of hydrolysis, particularly when combined with moisture, which damages fibres and coating. Do not store your paraglider near radiators or other heat sources. Always transport your glider in the special concertina bag and use the backpack provided for the rest of the equipment.

## Care

The materials used in the APAX evo have been carefully selected for maximum durability and performance. Nevertheless, following the guidelines below will keep your paraglider airworthy and will ensure a long period of continuous safe operation. Excessive wear is caused by careless ground handling and packing, unnecessary exposure to UV light, chemicals, heat and moisture.

### Ground handling

The following should be avoided:

- Don't ground handle or take-off on abrasive surfaces.
- To move the paraglider to another spot, don't drag it across the ground. Pick it up and carry it.
- Violent shocks to the upper surface (e.g. when the canopy crashes to the ground leading edge first whilst ground handling). This stresses the seams and can even cause the cell to explode.
- Don't repeatedly inflate the glider and allow it to crash back down. Step towards the wing as it comes down to take the force out of this action.
- Dragging the glider along the ground.
- Stepping on the lines or canopy. The Kevlar line inside the sheath can take lots of pulling force without stretching, but is sensitive to bending with small radius.
- Opening your wing in strong winds without first untangling the lines.
- Don't sit on your rucksack when your glider is packed inside.

### Fabric

Care is essential to ensure that the fabric and glider remain durable and retain their qualities. The glider should therefore be protected from unnecessary UV light. Do not unpack your glider until immediately before flight and pack it up straight after landing. Modern paraglider fabrics have better protection against the sun, but UV rays in particular are still one of the decisive factors in how the fabric ages. The colours will fade first and then the coating and fibres will begin to age.

When choosing a place to launch, try to find somewhere which is smooth and free of stones and sharp objects. Do not stand on the glider. This weakens the fabric, especially if it is on a hard or stony surface. Pay attention to the behaviour of spectators at the launch site, especially children: do not hesitate to draw their attention to the sensitive nature of the fabric.

When you are packing up your glider, make sure that there are no insects trapped inside. Many insects produce acids when they decompose, which can cause holes in the fabric.

Grasshoppers make holes by biting through the fabric and also excrete a dark liquid which stains. Keep animals away when you are packing up. Insects are not attracted by any particular colours, contrary to what is commonly believed.

If the glider gets wet or damp, it should be dried as soon as possible in a well-ventilated room (but out of the sun). It may take several days before the canopy has dried completely because the fibres absorb water. Mould may form if the paraglider is stored wet and the fibres may rot, particularly when it is warm. This can make the paraglider unsuitable for flying within a short time.

A brand-new glider will often be compressed when delivered. This is solely for the initial delivery and the glider should not be compressed in such a way again. Do not pack your glider too tightly after use and, even though it is very comfortable, never sit on the backpack with the glider inside.

If salt water gets on the glider, it should be rinsed immediately in fresh water (refer to the section “Cleaning”).

### **Lines**

The APAX evo has various different high-quality and accurately manufactured lines which have been selected according to the load and area of use. You should also protect the lines from unnecessary UV light because, as with the fabric, UV light in particular will weaken the lines.

Dyneema lines, which are used in the area of the top brake lines, for example, are very temperature-sensitive and can be permanently damaged at temperatures above 75° C. Therefore your glider should never be stored in a hot car especially during summer.

Be careful that there is no abrasion caused to the coating on the lines by rubbing, particularly when ground-training with crossed risers.

Do not walk on the lines after the glider has been spread out and watch out for spectators or skiers who may inadvertently go over the lines.

When you are packing up the glider, be careful to avoid putting any unnecessary kinks in the lines and use only the overhand knot or bowline knots described for the brake lines.

### **Rigid construction**

Various forms of plastic rods are used in the APAX evo (rigid construction), which help maintain the shape of the leading edge and the stability of the canopy. To ensure that the plastic rods keep their shape, it is important that you pack the glider as described in the section “Packing the paraglider”.

The plastic rods on the APAX evo can all be replaced through small pockets. If you notice that a plastic rod has been damaged or misshapen because of incorrect use, this can be replaced by Fresh Breeze or a Fresh Breeze authorised workshop.

### **Cleaning**

If you do have to clean the glider, use only lukewarm fresh water and a soft sponge. Use a weak soap solution for stubborn stains, and then rinse it out carefully and thoroughly. Leave the glider to dry in a place which is well-ventilated and in the shade.

Do not under any circumstances use chemicals, brushes, rough cloths, high-pressure cleaners or steamers to clean the glider, as these can damage the fabric coating and weaken it. The glider becomes porous and loses breaking strength.

Do not under any circumstances put the glider in the washing machine. Even if washing powder is not used, the glider would be badly damaged by the mechanical action of the machine. Do not put the canopy into a swimming pool - chlorine will damage the fabric. If you have no choice but to rinse the glider, e.g. following a landing in the sea, gently wash it down inside and out with fresh water. Frequent rinsing accelerates the aging process.

## Maintenance

### Type designation

Fresh Breeze have an exact identification on the underside of the wingtip or on the centre rib, which is obligatory for all paragliders. The information required is set out in the airworthiness requirements.

It is helpful to provide the type designation of the paraglider if you are contacting your Fresh Breeze dealer with any queries or ordering replacement parts or accessories, to ensure accurate identification.

### Regular inspections

The following parts and materials must be inspected regularly for damage, abrasion and correct operation, e.g. after landing:

- Risers and quick-links
- Lines
- Fabric

### Lines

Measuring the length of the lines is part of the regular paraglider inspection. The lines must be measured with a load of 5kg, in order to ensure reproducible results for a comparison with the lengths in the check sheets.

The lines have a considerable influence on flight behaviour. Correct line length and symmetry are also important for performance and handling. Fresh Breeze therefore recommends an inspection every 50 to 100 hours or once a year.

Environmental conditions such as high temperatures or moisture can affect line length. Check the line length regularly, particularly if you notice any change in launch or flight behaviour. The line length should be checked if you have landed in water or if the lines have got wet through. Lines age and lose strength even if the paraglider is used infrequently or not at all. This can affect the safety and function of your paraglider.

Signs of wear are slight bumps or changes in flying characteristics. The lines must then be replaced immediately. Use only inspected and approved lines, which can be obtained through Fresh Breeze.

**WARNING: A damaged line can result in loss of control of the glider. Always replace lines which are damaged. If you need to replace damaged or worn-out parts, use only original parts or approved parts from the manufacturer.**

**WARNING: Do not under any circumstances use knots to shorten the lines. Any knot will weaken the line considerably and may cause the line to break in case of high load. The overhand knot and bowline knots described are permitted only for connecting the main brake lines/brake handle.**

### Inspection periods

Failure to observe the inspection periods shall render invalid the certification and warranty. A properly completed logbook with details of all flying and training will help you to comply with these periods.

A qualified professional should perform a formal maintenance inspection no later than 36 months after the first flight or after 200 hours (including ground handling), whichever is sooner. Subsequent inspections should be carried out every 24 months or 150 hours (including ground handling), whichever is sooner.

Ground handling time must be at least doubled when calculating the total hours of use because of the increased wear and tear on the glider. If you ground handle frequently or fly in harsh conditions, we recommend an annual check. It is your responsibility as a pilot to ensure that your wing is airworthy at all times.

For gliders used in training, an inspection must be carried out every 12 months from the date of purchase.

A full inspection will give you peace of mind and extend your glider's lifetime. Additional inspections should be performed by a qualified person following a crash or violent landing on the leading edge, or if you note a deterioration of performance or behaviour.

Service and repair shops authorized by Fresh Breeze are in possession of the Fresh Breeze service instruction, which contains all the necessary procedures, equipment and additional technical information about the APAX evo, such as single line lengths, sewing and further material and processing guidelines.

### Validity of inspection

It is very important that your glider is serviced at the required intervals throughout its entire life. In order to benefit from Fresh Breeze warranty:

- You must have your paraglider inspected by Fresh Breeze or an inspection agent authorised by Fresh Breeze.
- The documentation and the result of the inspection must be clearly identifiable (date and place / name of the inspector) and be entered near the glider information/certification sticker.

### Inspection by the pilot

Under § 14 para. 5 of the German Aeronautical Products Investigation Order (LuftGerPV), pilots in Germany are able to carry out the inspections themselves or appoint a third party to do so

(e.g. manufacturer/importer), provided that the requirements are all fulfilled. However, if this is done, the liability and warranty of Fresh Breeze will lapse.

The DHV recommends that inspection is carried out by the manufacturer/importer or by an authorised inspection agent .

## Repairs

### Fresh Breeze workshops

All repairs and servicing should be carried out by a Fresh Breeze authorised workshop or directly by Fresh Breeze. Fresh Breeze workshops have trained staff, original Fresh Breeze parts and the necessary know-how, all of which will ensure top quality.

Major repairs at the APAX evo, such as replacing panels, should only be carried out by the distributor or manufacturer.

### Small repairs to the glider

Very small holes in the sail can be repaired with the sticky back tape provided with your glider. Damaged lines should be replaced by your Fresh Breeze dealer. Before fitting a replacement line, check it for length against its counterpart on the other side of the wing. When a line has been replaced, always inflate the glider on flat ground to check that everything is in order before flying.

**WARNING: Do not attempt to perform repairs unless you have the knowledge, experience, materials and tools needed to do the job properly.**

### Fresh Breeze quality and service

We take pride in the quality of our products and are committed to putting right any problems affecting the safety or function of your equipment and which are attributable to manufacturing faults. Your Fresh Breeze dealer is your first point of contact if you have any problems with your equipment. If you are unable to contact your dealer or Fresh Breeze importer, contact Fresh Breeze directly via our website.

# Dimensions, illustrations, technical and EN/LTF data

## Introducing the APAX evo

The APAX evo is a universal paramotoring wing for beginning and leisure pilots who want a confidence-inspiring wing that is also fun to fly, both with and without a motor. A “do everything” wing that’s good for a least the first 2 seasons of your career”

Fresh Breeze test pilots explain the philosophy behind the APAX evo:

“Your first wing is one of the most important decisions you’ll ever make. One of the biggest problems we see is beginners choosing to start with wings ‘to grow into’. Such wings are often too hot and the result can be broken props, scraped knees and worse.

Instead, when you start with the right wing, you will learn faster and be more safe in a wider variety of conditions.

We believe good take-off characteristics are the most important quality for a beginner wing. During the APAX evo development, we spent a lot of time improving the inflation, making sure the wing comes up easy and straight in all conditions. We also made the take-off speed as low as possible, which means getting airborne is smooth and effortless.

We also aimed to make the APAX evo a versatile wing that pilots could really have fun with. You can confidently fly the APAX evo in midday thermals, both with and without a motor. The controls are responsive yet progressive – it’s never dull. The wing does whatever you ask it to, but at the same time, it’s still incredibly forgiving.

The APAX evo is a ‘do everything’ wing that’s good for at least the first 2 seasons of your flying career, or even much longer.”

### Delivery

Make sure your dealer has checked and test-flown the glider. Your glider will be delivered to you with the original trim settings which correspond to the tested configuration. Do not make any modifications, such as changing the risers or altering the line lengths. This would invalidate the certification and is potentially dangerous.


**NOTE: Your glider may have been delivered with some lines looped on the maillons, this is to allow the glider to be re-trimmed during a professional check at the recommended service interval.**

### Manufacturing

All Fresh Breeze are produced in the company's own facilities using the most modern techniques. Highly skilled staff take extreme care during the entire manufacturing process. Stringent quality control is made after each step, and all materials that go into each wing can be traced. These measures guarantee that pilots fly with the assurance that their wing meets the most exacting safety standards.



## Overall illustration

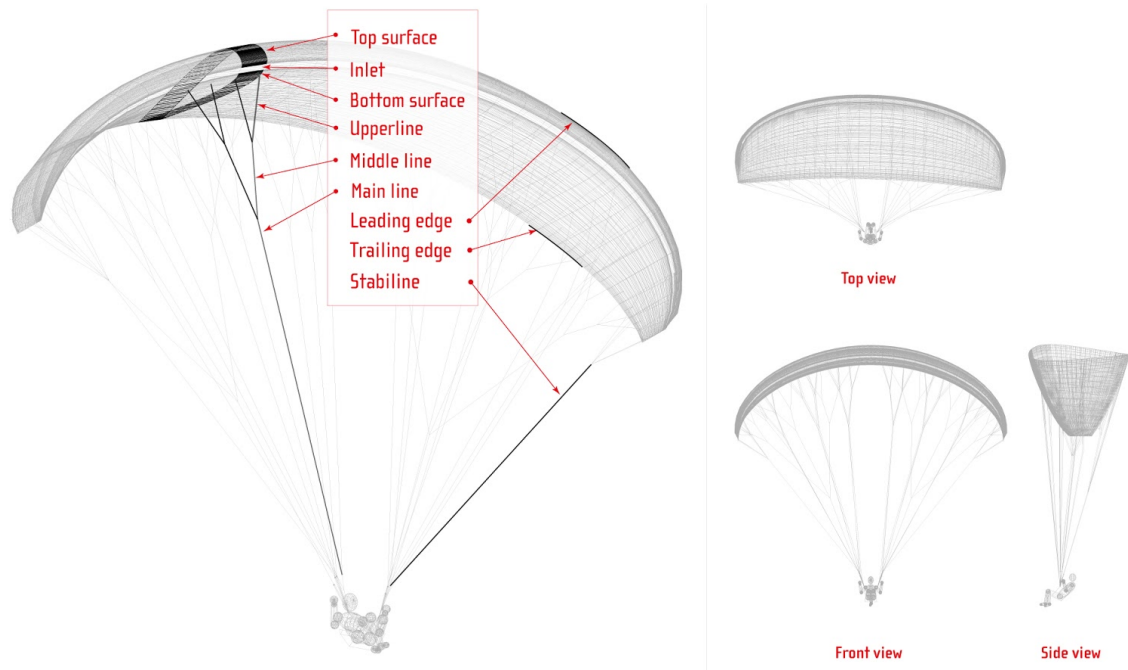

**Figure:** Overall Illustration

## Technical data

Size	24	26	28
Area (flat) [m <sup>2</sup> ]	24.2	26.4	28.6
Area (projected) [m <sup>2</sup> ]	21.0	22.9	24.8
Span (flat) [m]	10.78	11.25	11.72
Span (projected) [m]	8.69	9.07	9.45
Aspect ratio (flat)	4.8	4.8	4.8
Aspect ratio (projected)	3.6	3.6	3.6
Cells	36	36	36
Glider weight [kg]	4.45	4.70	5.00
Weight in flight [kg]			
Free flying	65-90	75-100	85-110
Motorized	65-120	75-130	85-140
EN/LTF	A	A	A
Motorized	DGAC	DGAC	DGAC

## Riser and speed system


### Riser

The specially developed riser for the APAX evo have a number of different settings and uses that the pilot should familiarize himself with before the first flight.

The APAX evo is equipped with a speed system and trimmers for motorized operation. In free flight, the trimmers must not be used – such a use would be outside the limits of EN certification. With both systems, the pilot can adjust the speed behaviour of the APAX evo in the respective operating mode.

There is also a choice of two riser hangpoints to allow the best set-up for the APAX evo for the particular motor system used. Furthermore, the upper brake pulley can be moved, and an additional lower braking pulley ensures that the pilot can always choose the best position and accessibility of the brake handle, depending on the hangpoint position and engine design.

### Riser diagram

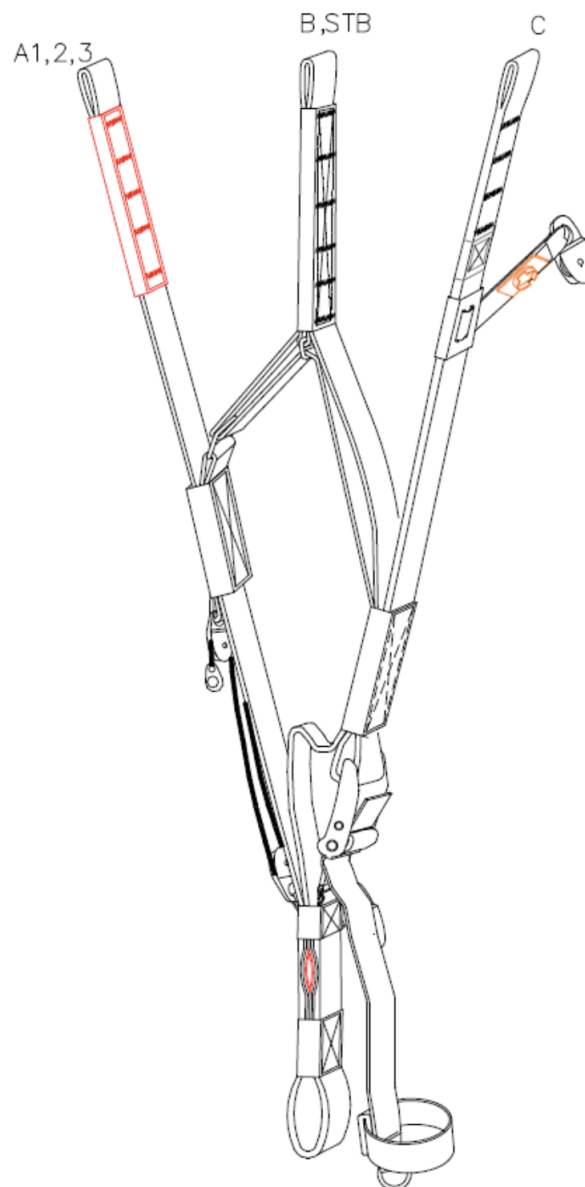

**Figure:** APAX evo riser

## Riser lengths

Riser	A	B	C
Length trim speed [mm]	500	500	500
Length accelerated [mm]	380	440	500
Length trimmer open [mm]	500	540	580

## Trimmer

The trimmer allows the pilot to increase cruising speed in motorised flight and to counter the torque effect. We recommend that you always have the trimmers closed when launching or landing.

Use the trimmer only in motorised flight. We generally recommend that you do not use the trimmer to increase speed in turbulent areas or near the ground because of the increased risk of collapse. Do not brake the glider symmetrically in accelerated flight. Pulling both brakes down firmly can deform the profile and, in an extreme case, cause a frontal collapse.

The trimmer must be locked off using the metal loop in non-motorised flight. It is possible to loop the metal loop attached to the end of the trimmer tab through the Carabiner before takeoff. This locks the trimmer in the neutral position and makes it impossible for the trimmer to be released in flight.

Make sure the trimmer is closed before attaching the safety ring to the main carabiner of the harness. In the case of open trimmers, the C-strap is considerably shortened!

**WARNING: Under no circumstances should the grip loop for the trimmer lock be put into the main hangpoint. This shortens the D-riser considerably, and this effect is increased by opening the trimmer when it is like this.**



**Figure:** Trimmer locked into the Carabiner and lower brake pulley

## Speed System

The APAX evo already has a high basic trim speed, but this can be increased considerably by using the additional speed system. It is particularly useful if there is a strong headwind, for valley crossings or to leave a dangerous area quickly.

The speed system accelerates the wing by progressively shortening the risers towards the front. This decreases the canopy's original angle of attack and the speed of the glider increases.

The speed system must be correctly fitted and adjusted to ensure it operates smoothly during flight. Before first launch, the length should be adjusted to suit the pilot and the line duct should be checked.

The speed bar and the riser are connected by special Brummel hooks. Adjust the length to the speed system so that your legs are fully stretched when at maximum accelerated flight ("pulley-to-pulley" on the riser), otherwise you may experience symptoms of fatigue in long flights. You should still be in a comfortable flight position even when the speed system is used to its full extent.

You will not be able to use the paraglider to its full potential if the speed system is too long. Fasten the speed bar to the harness before launch to avoid tripping over it when preparing to launch or taking off.

**WARNING: Do not make the speed system too short. The glider must under no circumstances be pre-accelerated as a result of the adjustment being too short. Problems (such as collapses or tucks) have a more drastic effect with increased speed than in unaccelerated flight. It is generally strongly recommended that you do not use the speed system in turbulent areas and when flying close to the ground, because of the increased risk of collapse.**

### Hangpoints

The APAX evo riser has two hangpoints to allow for optimal adaptation of the glider to the motor system used.

Depending on the hangpoint used, the pilot may wish to adjust the brake length and the height of the brake pulley on the riser. For more information see chapter 'Setting the Brakes'.

**WARNING: Ensure that the Carabiner has a single piece of red webbing on each side of it. Incorrectly installed Carabiners could damage the riser and result in failure.**

**Figure:** APAX evo riser hangpoints (upper red, lower blue)



## Line system, brakes and line plan

### Line system

The APAX evo has A, B and C line levels, which fork two or three times from the bottom (riser) to the top (canopy) and which are divided into "Main", "Lower-Middle", "Higher-Middle" and "Top" lines. The individual line levels are connected with one another using the "handshake knot" (special hoop technology).

With the brake lines, the individual levels are bundled at the end with the main brake line. This runs through the brake ring (or pulley) attached to the riser and is knotted at the brake loop of the control handle. There is a mark on the main brake line which allows the control handle to be correctly positioned.

The main lines are all attached to Maillon quick links. They are fed through special elastic rings (or plastic clips) and attached to prevent the lines from slipping and to ensure that they sit in the correct position.

## Brake line adjustment

### Factory setting

The brake lines of the APAX evo are set to the length that was used for the EN certification test flights. These line lengths have been finely tuned by the Fresh Breeze test pilots, and it should not be necessary to adjust them.

The brake line length is tuned so that there is slack in the brake lines when the glider is in fully accelerated flight. Therefore, the brakes are quite slack at trim speed, and to take up that slack in soaring flight, it is common to fly with half a wrap on the brakes and hold the handles on the knot. However, care should be taken to release the wraps in any extreme situation.

If you do need to make adjustments to suit your harness, body and flying style, we strongly recommend that you test fly the glider after every 2 cm of adjustment. There should be a minimum of 10 cm of free brake travel when the glider is flown hands-off. This prevents the brakes being applied unintentionally when the speed system is fully engaged. We recommend a double sheepshank or a bowline knot for the brake handle attachment as shown in the diagram.

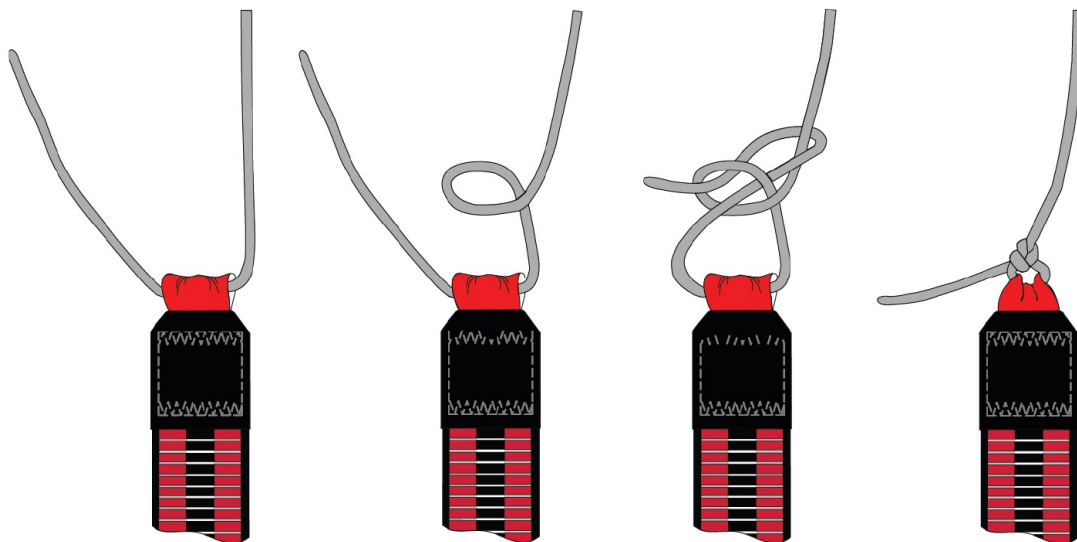


Figure: Bowline knot

**WARNING: Loose, unsuitable or incorrectly tied brake line knots can cause the main brake line to loosen and then lead to loss of control of the glider.**

### Incorrect adjustment

If the brake lines are too long, the paraglider reacts slowly and is difficult to land. The brake lines can be adjusted during flight by wrapping them around your hands which will improve the flight characteristics. Adjust the brake lines to the correct length after you have landed. Changes to the braking distance should always be made in small increments of no more than

2 to 3 cm and must be tested on a training slope. The left and right brakes must be adjusted symmetrically.

If the brakes are shortened, care must be taken that the paraglider is not slowed down in trim and accelerated flight. Safety issues may arise and performance and launch behaviour may deteriorate if the brake lines are shortened too much.

If the brake lines are too short, the following risks could arise:

- there could be an early stall
- the paraglider does not launch well and there is a risk of deep stall
- the paraglider exhibits dangerous behaviour in extreme flying
- the trailing edge of the paraglider is braked in accelerated flight which, in an extreme case, could cause a frontal collapse

**WARNING: Environmental conditions can also lead to the brake lines shortening. You should therefore check brake line length regularly, particularly if there is any change in launch or flight behaviour.**

### Variable brake pulleys

#### Upper brake pulley

The position of the upper brake pulley can be adjusted to suit the needs of the pilot by sliding the pulley webbing freely on the riser. If the brake handle is still difficult to reach despite the correctly selected hook-in loop on the riser (e.g. with the trimmer Open), the brake pulley can be pushed downwards on the riser.

**WARNING: If the brake pulley is pushed downwards on the riser, the main brake line must be enlarged to the distance the brake pulley has been moved downwards! Otherwise the glider will be braked even when the brake is fully released.**

In the case of free flying, the brake pulley must always be placed in the upper position and the length of the main brake line adjusted to this (factory setting of the brake).




**Figure:** Variable brake pulley

#### Lower brake pulley

The APAX evo riser has a lower brake pulley which is appropriate for very high attachments, e.g. when the glider is used with a trike. If you choose to use the lower brake pulley in this way, be sure to check that the brake lines are the right length. You may have to lengthen the brake lines to avoid the trailing edge being inadvertently pulled down when the glider is fully accelerated with the trimmers open.

# Line layout

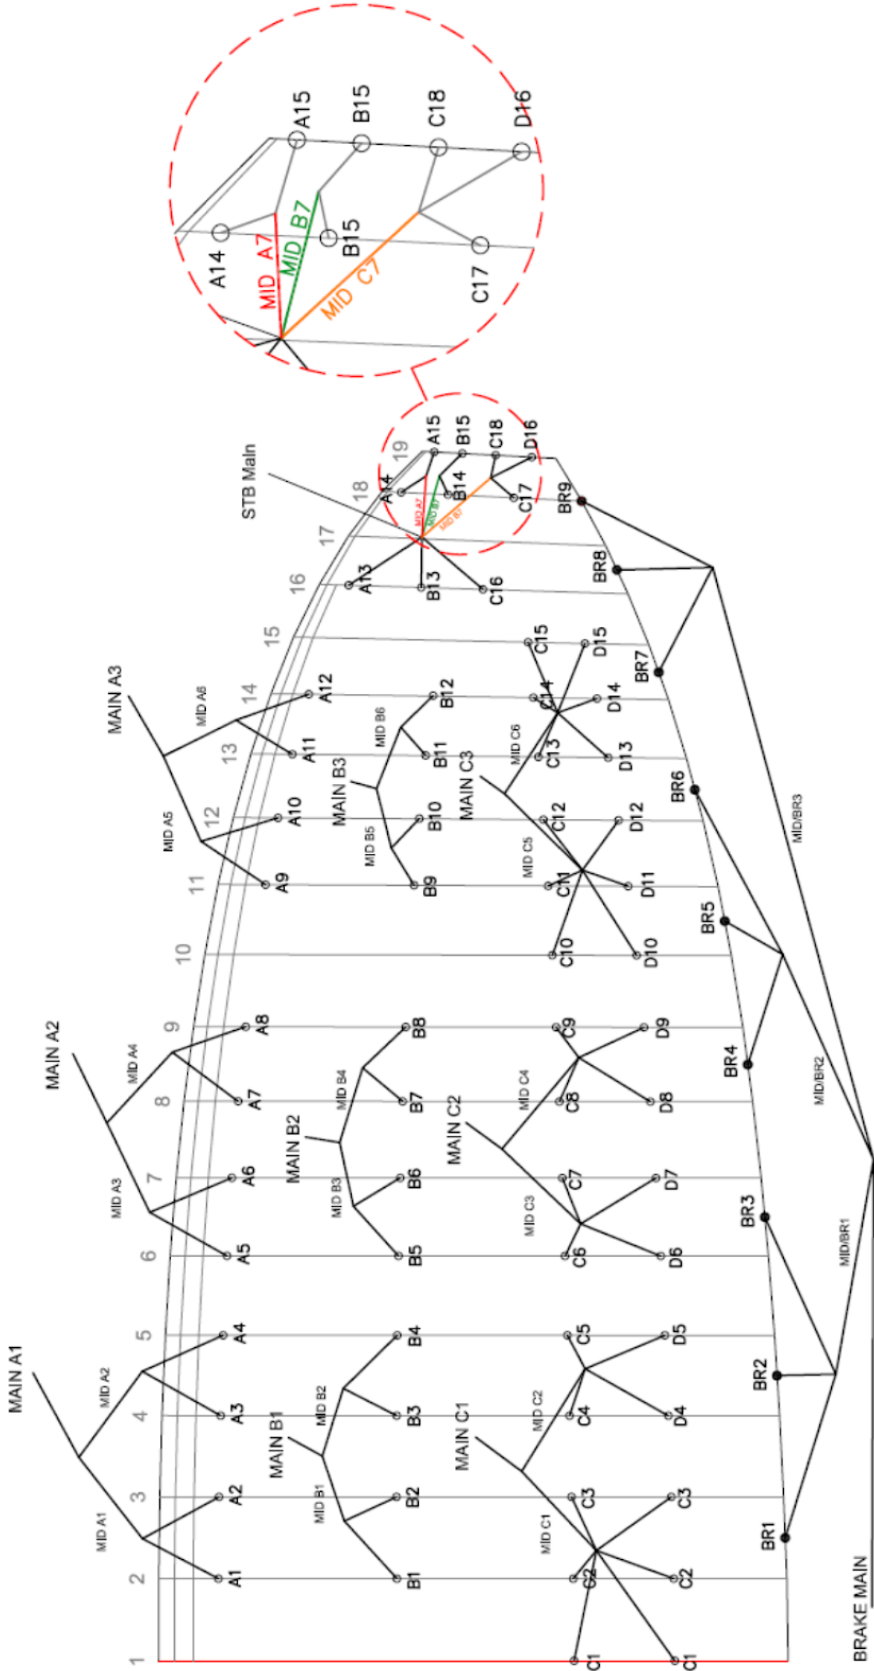

## Materials

### Canopy fabric

---

Upper surface leading edge	Dominico 30DMF 41 g/m <sup>2</sup> water repellent
Upper surface trailing edge	Dominico 20DMF 34 g/m <sup>2</sup> water repellent
Lower surface leading edge	Dominico 30DMF 41 g/m <sup>2</sup> water repellent
Lower surface trailing edge	Porcher Skytex 40 g/m <sup>2</sup> water repellent
Ribs	Myungjin 38HF 38 g/m <sup>2</sup> water repellent

### Lines

---

Upper	Fresh Breeze TGL 80
Middle	Fresh Breeze TGL 125   145
Main / brake	Fresh Breeze TGL 125   180   220   280

### Riser

---

Güth & Wolf 20mm Polyester

### Line shackle

---

Stainless steel 3.85mm

### Canopy thread

---

Amann & Söhne - Mill Faden 150D/3  
Polyester bonded



# Appendix

## Glider details

Size:	Colour:	Serial number:
Check flight (date): _____		
Name and signature: _____		

## Pilot details / Proof of ownership

1. Owner	
Name:	
Address:	
Phone:	
Email:	
2. Owner	
Name:	
Address:	
Phone:	
Email:	
3. Owner	
Name:	
Address:	
Phone:	
Email:	

**Inspections and repairs overview**

Date	Work carried out	General condition on delivery	Completed by (Name)	Stamp and signature

**Notes**

---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---



---

## Adresseses

### **Fresh Breeze GmbH & Co. KG**

Langer Acker 11  
30900 Wedemark / Bissendorf  
Germany  
Telefon +49 / (0)5130 / 3769922  
Fax +49 / (0)5130 / 3769944  
Email: info@fresh-breeze.de  
www.fresh-breeze.de  
www.facebook.com/FreshBreeze.GmbH  
Instagram: freshbreeze\_ppg

### **DHV**

Am Hoffeld 4  
Postfach 88  
83701 Gmund am Tegernsee  
Germany  
Fon: +49 (0) 8022 9675 - 0  
Fax: +49 (0) 8022 9675 - 99  
Email: dhv@dhv.de  
www.dhv.de

### **Air Turquoise SA**

Route du Pré-au-Comte 8  
1844 Villeneuve  
Switzerland  
Fon: +41 219 65 65 65  
Fax: +41 219 65 65 68  
www.para-test.com

### **DGAC**

Bâtiment 1602  
9 rue de Champagne  
91200 Athis-Mons  
FRANCE  
www.ecologique-solidaire.gouv.fr/ulm-introduction

### **DULV**

Mühlweg 9  
71577 Großerlach-Morbach  
Germany  
Fon: +49 (0) 7192 93014 - 0  
Email: info@dulv.de  
www.dulv.de

### **FAI - Fédération Aéronautique Internationale**

Maison du Sport International  
Av. de Rhodanie 54  
1007 Lausanne  
Switzerland  
Fon: +41 21 345 1070  
Fax: +41 21 345 1077  
www.fai.org

**FRESH**  **BREEZE**  
*POWERED PARAGLIDER*